



Swan

designed for life



Steam Generator

Model: SI9060N

Helpline

0871 200 0003

v1.0





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

When using any electrical appliance, basic safety precautions should always be followed including the following:

- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years. Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorised service agent.
- Never immerse the unit in water or any other liquid for cleaning purposes.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains. Always unplug the unit when not in use, before cleaning or when adding or removing parts.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire or electric shock.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled on inadvertently.
- Do not allow the cord to touch hot surfaces and do not place on or near a hot gas or electric burner or in a heated oven.
- Do not use the appliance on a gas or electric cooking top or over or near an open flame.
- Use of an extension cord with this appliance is not recommended. However, if it is necessary to use an extension lead, ensure that the lead is suited to the power consumption of the appliance to avoid overheating of extension cord, appliance or plug point. Do not place the extension cord in a position where it can be pulled on by children or animals or tripped over.
- This appliance is not suitable for outdoor use. Do not use the appliance for anything other than its intended use.





IMPORTANT INFORMATION - RETAIN FOR FUTURE USE

- Do not carry the appliance by the power cord.
- Do not leave the appliance unattended during use. Always unplug the unit when not in use or before cleaning.
- Always operate the appliance on a smooth, even, stable surface. Do not place the unit on a hot surface.
- Ensure that the unit is switched off after use.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- In case of technical problems, switch off the product and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment or repair. Always insist on the use of original spare parts. Failure to comply with the above mentions precautions and instructions, could affect the safe operation of this product.
- Your appliance must never be switched on through an external timer or any kind of separate remote control system
- The water inlet must be closed during use
- Do not open the safety valve while using the appliance or before the water is completely used up (when the iron stops producing steam indicates that the tank is empty). To add water, unplug and wait 15 minutes to avoid sudden temperature changes. Place a cloth over the safety valve and unscrew slowly to allow any remaining steam/pressure to escape slowly
- Only place the unit complete with base on a stand that is designed to withstand the weight. Some lightweight ironing boards may be unsuitable. In this case, place on separate counter top.



TECHNICAL DATA

Description: Steam Generator

Model: SI9060N

Input Voltage: 220-240V

Frequency: 50Hz

Power consumption: 2000-2400 Watts



CAUTION: SURFACES BECOME HOT DURING USE

Swan

 
3





PARTS

1. Power cord
2. Handle
3. Iron rest
4. Soleplate
5. Temperature control knob
6. Heating indicator light (Iron)
7. Steam button
8. Steam button lock
9. Steam release button
10. Supply hose
11. Power switch
12. Safety valve
13. Heating indicator light (Base)
14. Unlock button

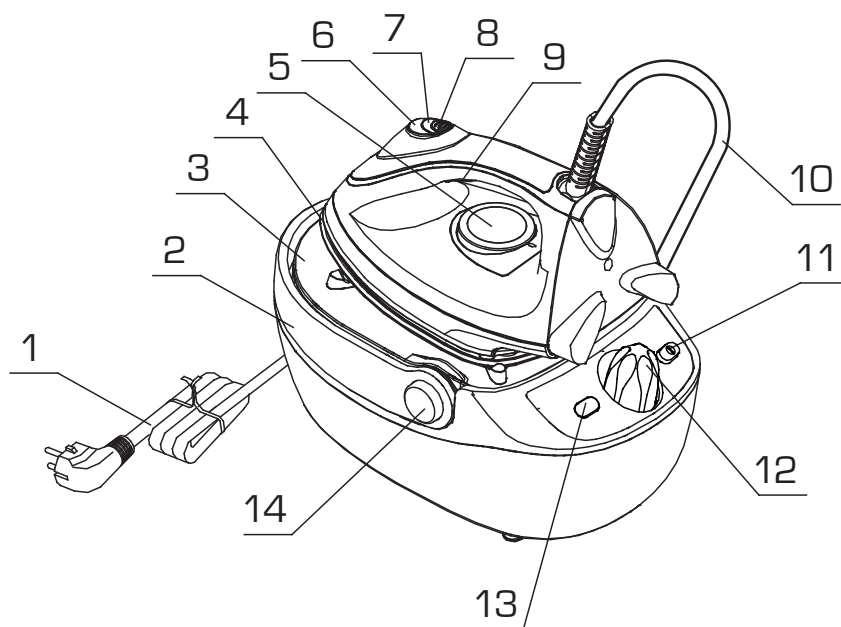



HOW TO USE

Temperature Setting	Synthetic ●	Wool Silk ● ●	Cotton ● ● ●	Max
Fabric	Nylon Synthetic Acrylic Acetate	Silk Wool Polyester	Rayon Cotton Linen	Cotton, Linen
Ironing Instruction	Dry iron on the opposite side of the fabric.	Use a press cloth and steam iron on the opposite side of the fabric	Steam Ironing	Steam Ironing
Steam Selection			/	/ /

PREPARE THE APPLIANCE FOR USE:

Remove all packaging including any soleplate covers etc.

- Check if the rating indicated in the rating plate is corresponding to the mains voltage in your home (220-240V).
- Press unlock button to lay the handle down.
- Fully unwind and straighten the power cord and the supply hose.
- Place the appliance on a stable, level and horizontal surface like an ironing board.
- Place the iron on the iron rest horizontally.
- Handle attached to the base unit is used for carrying the appliance. Press two lock buttons at the same time to lay down the handle.
- After use, allow the appliance completely cool down, put the iron on the base. Lift handle up. There will be a “click” sound to indicate the handle has been locked in place and you can carry the appliance by the handle. (Fig.2)

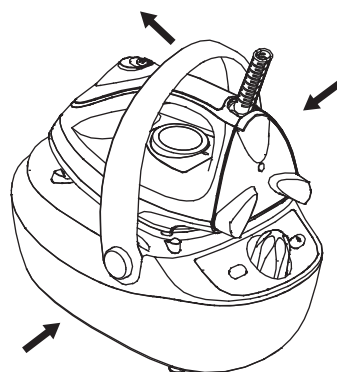 


Fig.1

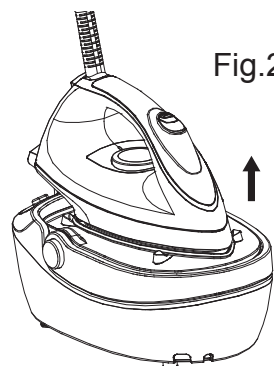 


Fig.2





HOW TO USE

CONTROLS

- Heating indicator light lights up when boiler is heating. [Fig.3]
- Power switch on control panel can control circuit for complete unit. [Fig.4]
- When used for the first time, the appliance may give off smoke and an odour for several minutes. This is caused by heating and subsequent drying of the sealers used in assembling the steam generator and iron

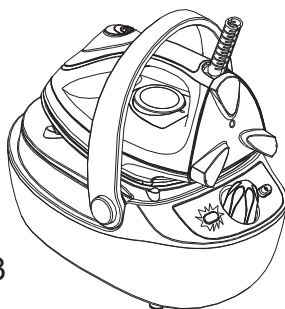 


Fig.3

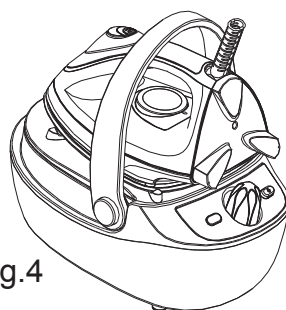 


Fig.4

DRY IRONING

1. Connect the appliance to a suitable socket outlet. Lay down the handle and press the power switch on the control panel. Then the heating indicator light will light up to indicate that the unit has been connected to the power supply.
2. Set temperature control knob to desired position according to above ironing temperature setting guide or fabric setting chart. Heating indicator light on the iron unit will turn on to indicate that the soleplate is being heated up. When heating indicator light turns off, it indicates that desired temperature has been reached. It is ready for dry ironing. During use, it is normal that heating indicator light will cycle on and off, which means that the soleplate is automatically keeping temperature constant. (For every first time use, it should be pre-heated for about 3 minutes to ensure even temperature across the soleplate)
3. After use, put iron unit back on the base unit, turn temperature control knob to "MIN" and turn off power switch on the control panel.
4. Unplug the appliance from main socket.
5. Note: When changing your temperature setting from higher setting to lower, do not start ironing immediately since it may burn your fabrics. Please wait until heating indicator light turns on, and then turn off again.
6. **For best results always start with the fabrics that need coolest setting first.**





HOW TO USE

FILLING THE BOILER

1. Make sure the supply cord is unplugged from the main socket.
2. Unscrew the safety valve. (Fig.5)
3. Fill the boiler with water using refill cup. (Fig.6)
4. Screw up the safety valve fully. (Fig.7)
5. **IMPORTANT: never unscrew the safety valve with the boiler under pressure. See safeguards on page 3**
6. After use, put iron unit back on the base unit, turn temperature control knob to "MIN" and turn off power switch on the control panel.

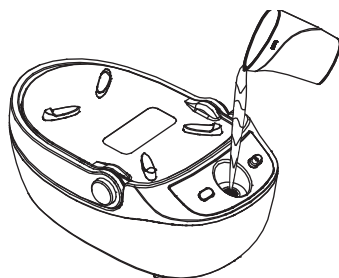 
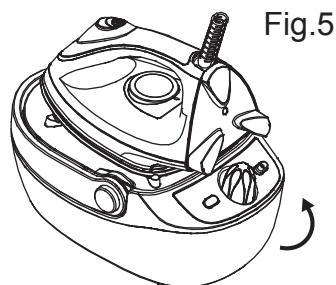 


Fig.6

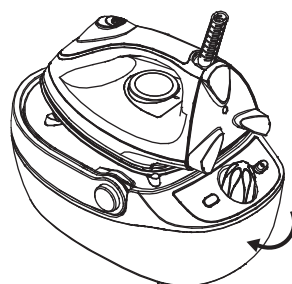 


Fig.7

STEAM IRONING

1. Before steam ironing, make sure the fabric is suitable for this kind of ironing. The machine works with normal tap water if you live in a soft water area. Use bottled or distilled water if you live in a hard water area. Refer to the Map on the inner lid of the retail box for more information.
2. Fill boiler with clean tap water as above filling instruction.
3. Connect the appliance into a suitable socket outlet, and press down the power switch on the control panel. The heating indicator light will light up to indicate that the unit has been connected to the power supply.
4. Set temperature control knob to steam ironing position according to fabric setting chart mentioned above. Heating indicator light on iron unit lights up to indicate the unit is being heated up. When the heating indicator light turns off, the desired temperature has been reached. It is ready for steam ironing. During use, the heating indicator light cycle from on to off. (For every first time use, please pre-heat for 3 minutes to ensure even temperature across the soleplate)



 


HOW TO USE

- Before each new ironing session we recommend cleaning iron unit as following methods: Take the iron up from the base unit, press steam release button underneath the handle to allow steam ON for 30 seconds, and then OFF for 30 seconds, this cycle should be repeated for 2 times. When heat indicator light turns off, it is ready for use.
- After use, put iron unit back on the base unit again, turn temperature control knob to "MIN", and then unplug the appliance from mains socket.

VERTICAL STEAM IRONING

- Follow the steam ironing process, and then hold the iron in vertical position about 5cm to 15cm away from the hanging fabrics. Press the steam release button, which will create vertical steam.
- This feature is especially used for removing creases from hanging clothes and curtains. Never direct steam toward people or animals (Fig.8)
- The room should be ventilated.
- Note: Never block the steam hose.**

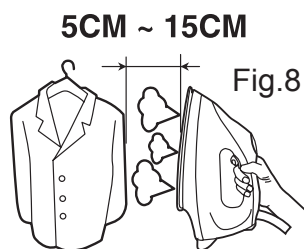

AUTO LOCK STEAM BUTTON

- If you feel your fingers need a rest from all that button pressing you can press down steam button lock and then push it backwards. The steam button will automatically lock. Steam will be produced continuously. If you want to stop steam, please push steam button lock forward.
- Note:** Once steam button auto-locking function is activated, do not leave the iron unattended.

SAFETY PROTECTION DEVICE

There is a safety valve in the base unit which is an additional safety protective device used to limit the steam pressure of the boiler within the safety range. Don't unscrew the safety valve during use, since the steam from the boiler can cause scalding!





HOW TO USE

EMPTYING AND STORING

- Disconnect the appliance from the main socket and allow the appliance to cool down for 60 minutes at least.
- After use, pour out all the remaining water. (Fig.9.)
- The iron should be placed on the iron rest, and then stored

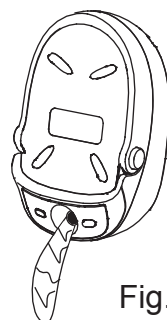 


Fig.9

CLEANING & MAINTENANCE

- Unplug the appliance from the main socket and let the iron completely cool down.
- Clean the iron with a damp cloth.
- Wipe off scale and any other deposits on the soleplate with a damp cloth or non-abrasive (liquid) cleaner. (Fig.10)
- Never clean the appliance under the tap.



Fig.10

DESCALING

It is very important to descale the iron regularly - especially if you live in a hard water area! If you notice small flecks of scale coming from the soleplate, it is a sure sign that the product needs descaling.

A cheap method of descaling is to use 1 part lemon juice to 10 parts water. Add to tank and run through for about 5 minutes on max steam setting. Empty out the water and repeat process with clean water.

We highly recommend using bottled water as it is inexpensive and it could be many years before you need to descale the product. In certain areas of the UK, the iron can become scaled up after only a few weeks! Call 0871 200 0003 for more info.





DOCUMENTATION

We Swan Products Ltd declare that this product conforms to the following product legislation in accordance with the following directive[s]:

2004/108/EC The EMC Directive (the Electromagnetic Compatibility Directive).

2006/95EC. The LVD Directive (Low Voltage Directive).

2011-65-EU. The RoHS directive (Restriction of Hazardous Substances Directive)



WARRANTY

This product is guaranteed for 2 years from the date of original purchase. If any defect arises due to faulty materials or workmanship the faulty products must be returned to the place of purchase. Refunds or replacement is at the discretion of the store.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- Swan Products Ltd has limited liability for incidental or consequential loss or damage.
- This guarantee is valid in the UK and Eire Only.



BS PLUG

The wires in the mains lead are coloured in accordance with the following code:

BLUE	NEUTRAL
BROWN	LIVE
GREEN/YELLOW	EARTH

As the colours of the wire in the mains lead of this appliance may not correspond with the colour markings identifying the terminals on your plug, proceed as follows:

The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L or coloured red. The wire which is coloured GREEN/YELLOW must be connected to the terminal which is marked with the letter E or (earth symbol) and is coloured GREEN or GREEN/YELLOW.

WARNING: THIS APPLIANCE MUST BE EARTHED





 
DISPOSAL OF UNIT



Appliances bearing the symbol shown here may not be disposed of in domestic rubbish. You are required to dispose of old electrical and electronic appliances like this separately. Please visit www.recycle-more.co.uk or www.recyclenow.co.uk for access to information about the recycling of electrical items. Please visit www.weeeireland.ie for access to information about the recycling of electrical items purchased in Ireland. The WEEE directive, introduced in August 2006, states that all electrical items must be recycled, rather than taken to landfill. Please arrange to take this appliance to your local Civic Amenity site for recycling, once it has reached the end of its life.



SWAN BRAND HERITAGE

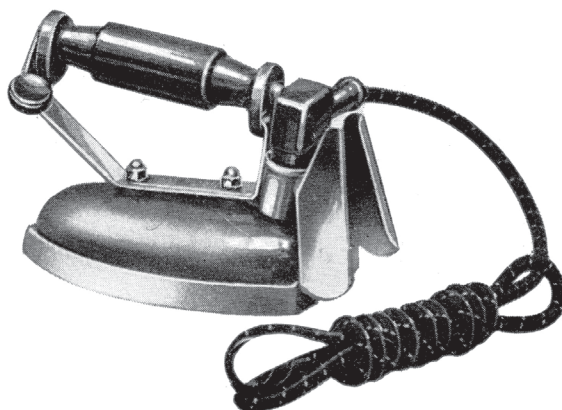

Did you know...

In 1933 most homes were heating their irons over the gas ring or still putting hot coal in them. This Swan iron was basically a n element with a handle, which plugged straight into a light bulb socket. And at a mere 14s hillings (70p), it meant many households could own a prestigious Swan Product.





www.swan-brand.co.uk



Scan this QR code
to hear about
our story



We love
what we do



we're proud
of our quality



Find us on Facebook

* on selected products

Copyright © Swan Products Ltd.
PO Box 3117, Stoke-on-Trent ST4 9GD

